 
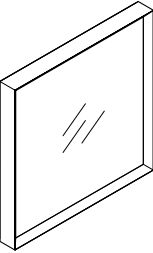 
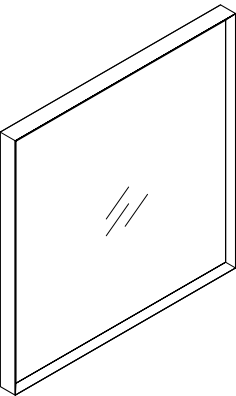 
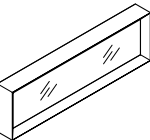 


 
FLO Q 150	DESCRIPTION	CODE		Q.TY
	Driver on-off 500mA	LB1070089		x1
	Driver DALI 500mA	LB1070078		x1
	Driver 1-10V 500mA	LB1070080		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	LB1340001		x1

 
FLO Q 300	DESCRIPTION	CODE		Q.TY
	Driver on-off 700mA	LB1070097		x1
	Driver DALI 700mA	LB1070098		x1
	Driver 1-10V PUSH	LB1070106		x1
	Driver TRIAC 700mA	LB1070097		x1
	Driver Emergency 700mA	LB1340005		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	LB1340002		x1

 
FLO Q 500	DESCRIPTION	CODE		Q.TY
	Driver on-off 700mA	LB1070096		x1
	Driver PUSH-DALI 700mA	LB1070079		x1
	Driver TRIAC 700mA	LB1070096		x1
	Driver Emergency 700mA	LB1340005		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	LB1340002		x1

 
FLO Q 800	DESCRIPTION	CODE		Q.TY
	Driver on-off 700mA	LB1070115		x1
	Driver PUSH-DALI 700mA	LB1070079		x1
	Driver Emergency 700mA	LB1070115		x1
	Driver TRIAC 700mA	LB1340006		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	RC1340003		x1

FLO R	DESCRIPTION	CODE		Q.TY
	Driver on-off 700mA	LB1070096		x1
	Driver DALI, 1-10V, PUSH 700mA	LB1070079		x1
	Driver Emergency 700mA	LB1070096		x1
	Driver TRIAC 700mA	LB1340005		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	LB1340002		x1

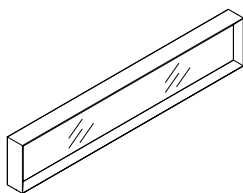FLO R 800	DESCRIPTION	CODE		Q.TY
	Driver on-off 1050mA	LB1070115		x1
	Driver DALI PUSH 1050mA	LB1070079		x1
	Driver TRIAC 1050 mA	LB1340006		x1
	Driver Emergency 1050mA	LB1070115		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	RC1340003		x1

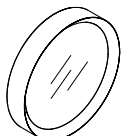FLO T 300	DESCRIPTION	CODE		Q.TY
	Driver on-off 700mA	LB1070097		x1
	Driver DALI 700mA	LB1070098		x1
	Driver 1-10V PUSH 700mA	LB1070106		x1
	Driver TRIAC 700mA	LB1340005		x1
	Driver Emergency 700mA	LB1070097		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	LB1340002		x1

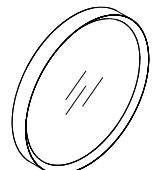FLO T 500	DESCRIPTION	CODE		Q.TY
	Driver on-off 700mA	LB1070096		x1
	Driver PUSH-DALI 700mA	LB1070079		x1
	Driver TRIAC 700mA	LB1340006		x1
	Driver Emergency 700mA	LB1070096		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	LB1340002		x1

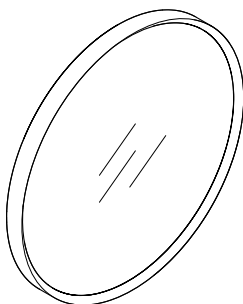FLO T 800	DESCRIPTION	CODE		Q.TY
	Driver on-off 1050mA	LB1070115		x1
	Driver PUSH-DALI 1050mA	LB1070079		x1
	Driver TRIAC 1050mA	LB1340006		x1
	Driver Emergency 1050mA	LB1070115		x1
	Kit Emergency	RC1340001		x1
	Staffa + Accessori + Istruzioni / Galvanized steel bracket + Accessories + Instructions Plaque de base + Accessoires + Instruction / Soporte + Accesorios + Instrucciones	RC1340003		x1