Ross



| ROSS 280 | DESCRIPTION | COL | CODE | Q.TY |
|----------|---------------------|-----|-----------|------|
| | Driver on-off 500mA | | LB1070092 | x1 |
| | Driver DALI | | LB1070099 | x1 |
| | Driver 1-10V PUSH | | LB1070100 | x1 |
| | Board 2.7K | | RC1240002 | x1 |
| | Board 3K | | RC1240003 | x1 |
| | Board 4K | | RC124000N | x1 |
| | | | LB1240015 | x1 |
| | | | LB1240016 | x1 |
| | Diff. + Cover | | LB1240004 | x1 |
| | | | LB1240017 | x1 |
| | | | LB1240005 | x1 |
| | Kit Emergency | | RC1161005 | x1 |

| ROSS 330 | DESCRIPTION | COL | CODE | Q.TY |
|----------|---------------------|-----|------------|------|
| | Driver on-off 500mA | | LB1070091 | x1 |
| | Driver DALI | | LB1070099 | x1 |
| | Driver 1-10V PUSH | | LB1070106 | x1 |
| | Board 2.7K | | RC1241002 | x1 |
| | Board 3K | | RC1241003 | x1 |
| | Board 4K | | RC124100N | x1 |
| | | | LB1240001 | x1 |
| | | | LB1240002 | x1 |
| | Diff. + Cover | | LB1240006 | x1 |
| | | | LB1240003 | x1 |
| | | | LB1240007 | x1 |
| | Kit Emergency | | RC1161005 | x1 |
| | Corridor sensor | | RCALC70DS2 | x1 |